

**OPERATING MANUAL** CROSS LINE LASER







# **Table of contents**

| Notes regarding the operating manual | 2 |
|--------------------------------------|---|
| Safety                               | 2 |
| Information about the device         | 4 |
| Transport and storage                | 5 |
| Operation                            | 6 |
| Maintenance and repair               | 9 |
| Errors and faults                    | 9 |
| Disposal                             | 9 |

# Notes regarding the operating manual

# **Symbols**



# Warning of electrical voltage

This symbol indicates dangers to the life and health of persons due to electrical voltage.



### Warning of laser radiation

This symbol indicates dangers to the health of persons due to laser radiation.



#### Warning

This signal word indicates a hazard with an average risk level which, if not avoided, can result in serious injury or death.



### **Caution**

This signal word indicates a hazard with a low risk level which, if not avoided, can result in minor or moderate injury.

### Note

This signal word indicates important information (e.g. material damage), but does not indicate hazards.



#### Info

Information marked with this symbol helps you to carry out your tasks quickly and safely.



# Follow the manual

Information marked with this symbol indicates that the operating manual must be observed.

You can download the current version of the operating manual and the EU declaration of conformity via the following link:



BD7A



https://hub.trotec.com/?id=42892

# Safety

Read this manual carefully before starting or using the device. Always store the manual in the immediate vicinity of the device or its site of use!



# Warning

# Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and / or serious injury.

Save all warnings and instructions for future reference.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Do not use the device in potentially explosive rooms.
- Do not use the device in aggressive atmosphere.
- Do not immerse the device in water. Do not allow liquids to penetrate into the device.
- The device may only be used in dry surroundings and must not be used in the rain or at a relative humidity exceeding the operating conditions.
- Protect the device from permanent direct sunlight.
- Do not remove any safety signs, stickers or labels from the device. Keep all safety signs, stickers and labels in legible condition.
- Do not open the device with a tool.
- Avoid looking directly into the laser beam.
- Never point the laser beam at people or animals.
- Only use the device if sufficient safety precautions were taken at the surveyed location (e.g. when performing measurements along public roads, on building sites etc.).
   Otherwise do not use the device.
- Observe the storage and operating conditions as given in the Technical data chapter.



#### Intended use

Only use the device BD7A for the projection on non-reflective surfaces as an aid to determine and check horizontal, vertical and / or parallel lines. Observe and comply with the technical data.

To use the device for its intended use, only use accessories and spare parts which have been approved by Trotec.

## Improper use

Do not use the device BD7A in potentially explosive atmospheres or in liquids. Never point it at people or animals. Trotec accepts no liability for damages resulting from improper use. In such a case, any warranty claims will be voided.

Any unauthorised modifications, alterations or structural changes to the device are forbidden.

## **Personnel qualifications**

People who use this device must:

- be aware of the dangers that occur when working with laser measuring devices.
- have read and understood the operating manual, especially the Safety chapter.

### Residual risks



# Warning of electrical voltage

There is a risk of a short-circuit due to liquids penetrating the housing!

Do not immerse the device and the accessories in water. Make sure that no water or other liquids can enter the housing.



### Warning of electrical voltage

Work on the electrical components must only be carried out by an authorised specialist company!



### Warning of explosive substances

Do not expose the battery to temperatures above 45 °C! Do not let the battery come into contact with water or fire! Avoid direct sunlight and moisture. There is a risk of explosion!



# Warning of laser radiation



Laser class 2, P max.: < 1 mW,  $\lambda$ : 650 nm, EN 60825-1:2014

Do not look directly into the laser beam or the opening from which it emerges.

Never point the laser beam at people, animals or reflective surfaces. Even brief eye contact can lead to eye damage.

Examining the laser output aperture by use of optical instruments (e.g. magnifying glass, magnifiers and the like) entails the risk of eye damage.

When working with a laser of class 2, observe the national regulations on wearing eye protection.



### Warning

Risk of suffocation!

Do not leave the packaging lying around. Children may use it as a dangerous toy.



#### Warning

The device is not a toy and does not belong in the hands of children.



### Warning

Dangers can occur at the device when it is used by untrained people in an unprofessional or improper way! Observe the personnel qualifications!



# Caution

Keep a sufficient distance from heat sources.

## Note

To prevent damages to the device, do not expose it to extreme temperatures, extreme humidity or moisture.

Do not use abrasive cleaners or solvents to clean the device.

# Information about the device


# **Device description**

The cross line laser BD7A projects laser lines on surfaces, e.g. to drill holes in a straight line — similar to using a spirit level.

The device comes with the following features:


- Projects light-intense laser lines up to a distance of 10 m
- Self-levelling up to an inclination of 3°
- Laser projection either as cross line, individual vertical line or horizontal 360° line
- Self-levelling function can be deactivated
- Battery-powered
- Integrated ¼ inch tripod connection

# **Device depiction**

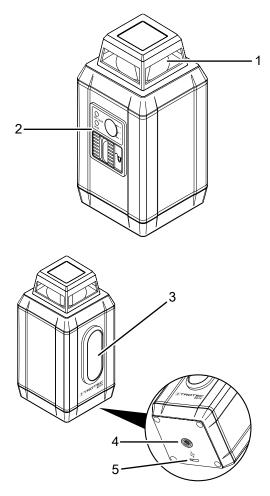


| No. | Designation                   |
|-----|-------------------------------|
| 1   | 360° laser outlet opening     |
| 2   | Operating elements            |
| 3   | Vertical laser outlet opening |
| 4   | 1/4 inch tripod connection    |
| 5   | Micro USB charging port       |

# **Operating elements**

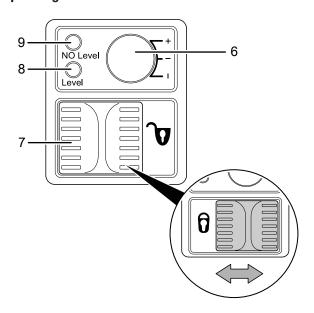

| No. | Operating element                        |  |
|-----|--|--|
| 6   | ON / OFF / operating mode button         |  |
| 7   | ON / OFF / lock switch                   |  |
| 8   | Levelling indicator "Level" (green LED)  |  |
| 9   | Levelling indicator "NO Level" (red LED) |  |

# **Multifunctional mount**

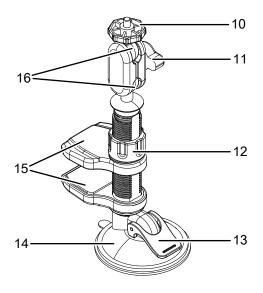

| No. | Designation                            |
|-----|--|
| 10  | Screw (for tripod connection)          |
| 11  | Wing nut (for ball joints)             |
| 12  | Locking screw (for retainer with jaws) |
| 13  | Lever (for suction cup)                |
| 14  | Suction cup                            |
| 15  | Retainer with jaws                     |
| 16  | Ball joint                             |



## **Technical data**

| Parameter  | Value   |
|--|---|
| Model  | BD7A  |
| Device dimensions<br>(length x width x height)             | 60 x 60 x 115 mm  |
| Device weight  | 280 g   |
| Multifunctional mount dimensions (length x width x height) | 125 x 81 x 220 mm   |
| Multifunctional mount weight                               | 189 g   |
| Interfaces   | Micro USB port for charger  |
| Range  | 10 m  |
| Operating temperature                                      | -20 °C to 50 °C   |
| Storage temperature  | -20 °C to 50 °C   |
| Levelling duration   | < 6 s   |
| Laser output   | < 1 mW (650 nm)   |
| Laser accuracy   | at 0°: ±0.8 mm/m<br>at ≤ 3°: ±1 mm/m  |
| Laser class  | 2   |
| Energy   |   |
| Battery  | Li-ion  |
| Capacity   | 1000 mAh  |
| Charging time  | 3 to 4 hours  |
| Nominal voltage  | 3.7 V <del></del>   |
| Operating time   | approx. 5 hours of continuous operation   |
| Automatic switch-off                                       | When the battery is low,<br>the levelling indicator<br>"NO Level" (9) flashes<br>for one minute before<br>the device turns off<br>automatically |

# Scope of delivery

- 1 x Cross line laser BD7A
- 1 x Multifunctional mount
- 1 x USB cable
- 1 x Manual

# **Transport and storage**

#### **Note**

If you store or transport the device improperly, the device may be damaged.

Note the information regarding transport and storage of the device.

# **Transport**

The supplied Li-ion batteries are subjects to the requirements of dangerous goods legislation.

Observe the following when transporting or shipping Li-ion batteries:

- The user may transport the batteries by road without any additional requirements.
- If transport is carried out by third parties (e.g. air transport or forwarding company), special requirements as to packaging and labelling must be observed. This includes consulting a dangerous goods specialist when preparing the package.
  - Only ship batteries if their housing is undamaged.
  - Please also observe any other national regulations.

For transporting the device use a suitable bag to protect it from external influences.

# **Storage**

When the device is not being used, observe the following storage conditions:

- dry and protected from frost and heat
- protected from dust and direct sunlight
- with a cover to protect it from invasive dust if necessary
- The storage temperature is the same as the range given in the Technical data chapter.



# **Operation**

# **Charging the battery**

The battery is partially charged upon delivery to avoid damage to the battery caused by a deep discharge.



#### Info

Upon delivery, the battery is only slightly charged. Therefore, please charge the battery for at least 5 hours before using the device for the first time.



### Warning of laser radiation

# Laser class 2, P max.: < 1 mW, λ: 650 nm, EN 60825-1:2014

Do not look directly into the laser beam or the opening from which it emerges.

Never point the laser beam at people, animals or reflective surfaces. Even brief eye contact can lead to eye damage.

Examining the laser output aperture by use of optical instruments (e.g. magnifying glass, magnifiers and the like) entails the risk of eye damage.

When working with a laser of class 2, observe the national regulations on wearing eye protection.



### Warning of electrical voltage

Before each use of the charger or power cable, check for damages. If you notice damages, stop using the charger or power cable!

### Note


The battery can be damaged in case of improper charging.

Never charge the battery at ambient temperatures below 10 °C or above 40 °C.

The battery should be charged prior to initial start-up and when the battery is low. To do so, please proceed as follows:

- 1. Unscrew the device from the multifunctional mount.
- 2. Plug the charger into a properly fused mains socket.

3. Connect the charging cable to the device's micro USB port.

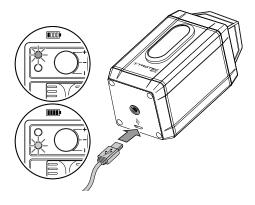


- 4. During charging, the levelling indicator "NO Level" (9) is illuminated in red.
- 5. When the battery is fully charged, the levelling indicator "Level" (8) lights up in green.

# Switching the device on

The device has two different modes of operation. On the one hand, you can use the device with the automatic self-levelling function, on the other, it is possible to set the laser to a fix position.

### Self-levelling function of the laser

- 1. Place the device on a horizontal, solid surface or secure it to the multifunctional mount.
- 2. Slide the on/off switch (7) to **1** to switch the device on.

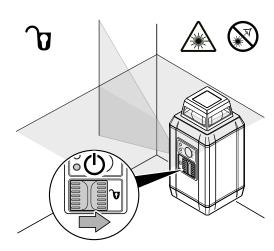

- ⇒ Both the vertical laser and the horizontal 360° laser switch on.
- $\Rightarrow$  The device automatically compensates for unevenness within the self-levelling range of  $\pm$  3°. During levelling, the laser lines move.
- ⇒ When levelling is completed, the levelling indicator "Level" (8) lights up in green.






#### Info

When exceeding the permissible inclination range of 3°, the lasers begin to flash and the levelling indicator "NO Level" (9) will be illuminated in red. If so, self-levelling will not function properly. This may be due to the fact that the surface structure is not even enough or covered with dirt, so the device is positioned too obliquely to be able to self-level within the possible angle of 3°. Check the surface, and reposition the device if required.

3. Press the operating mode button (6) to activate the vertical laser only or the horizontal 360° laser only.

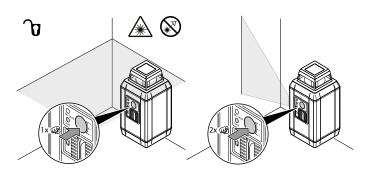

4. Slide the on/off switch (7) back to **1** to switch the device off.

### **Fixed position of the lasers**



#### Info


In this operating mode the device's self-levelling function is deactivated.

- 1. Check whether the lock switch (7) is set to  $\boldsymbol{0}$  .
- 2. Press the operating mode button (6) to switch both lasers on.
- 3. Press the operating mode button (6) a second time to only activate the horizontal laser.
- 4. Press the operating mode button (6) a third time to only activate the vertical laser.
- 5. Press the operating mode button (6) a fourth time to switch the device off.

# Using the multifunctional mount

Proceed as follows to use the multifunctional mount with the device:

1. Screw the mount into the tripod connection at the device.

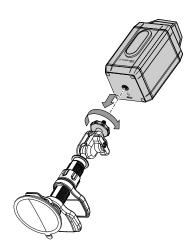


By means of the suction cup you can affix the mount to smooth surfaces such as tiles or glass.

Alternatively, the clamping jaws can be used to fasten it to a shelf or the edge of a table.

# Swivelling the device

1. Loosen the wing nut (11).

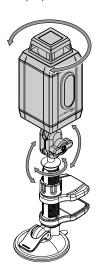


- 2. Swivel the device on the ball joints to move it into the desired position.
- 3. Retighten the wing nut (11).




# Application example for the universal clamp

1. Loosen the locking screw (12) and push the clamping jaws (15) apart until they fit onto the carrier (here: shelf).

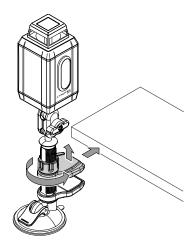


- 2. Tighten the screw (12) until the jaws (15) of the universal clamp are firmly attached to the carrier and the mount can no longer be moved to and fro.
- 3. To unfasten the clamping jaws (15), loosen the screw (12) until the retainer can be removed from the carrier without difficulty.

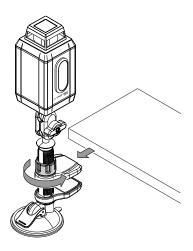


# Application example for the suction cup


- 1. Make sure that the surface is smooth and clean.
- 2. Disengage the lever (13) at the suction cup (14).

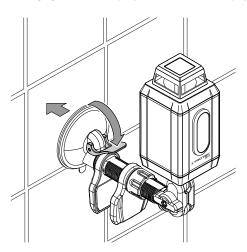

- 3. Press the suction cup (14) against the surface (here: tiles).
- 4. Engage the lever (13) until it locks in place.

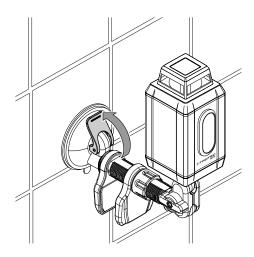

- 5. Check the suction cup (14) for tight fit.
- 6. In order to remove the suction cup (14) again, release the lever (13), then pull at the lug of the suction cup.

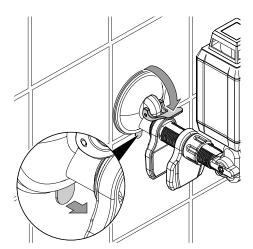



# Maintenance and repair

# **Charging the battery**

The battery should be charged prior to initial start-up and when the battery is low. To do so, please follow the instructions in the chapter Operation.

# Cleaning

Clean the device with a soft, damp and lint-free cloth. Make sure that no moisture enters the housing. Do not use any sprays, solvents, alcohol-based cleaning agents or abrasive cleaners, but only clean water to moisten the cloth.

# Repair

Do not modify the device or install any spare parts. For repairs or device testing, contact the manufacturer.

### **Errors and faults**

The device has been checked for proper functioning several times during production. If malfunctions occur nonetheless, check the device according to the following list.

# Self-levelling is not possible:

- Check whether the lock switch (7) is released and the laser can move freely. If the laser is not able to move back and forth freely within the 3° angle despite the lock switch being released, please contact the customer service.
- 2. Check the surface on which the device is placed. If necessary, remove coarse dirt.

# Laser lines are not properly horizontal/vertical:

 Check the laser for freedom of movement in self-levelling mode. If the laser is not able to move back and forth freely within the 3° angle despite the lock switch being released, please contact the customer service.

## **Horizontal laser lines are partially interrupted:**

• The lateral struts of the protective cover accommodating the laser cause interruptions in the horizontal 360° laser line at defined points. This cannot be avoided. Should you detect interruptions at other points, please check the glass covers of the protective cover for scratches or dirt, which may be the cause of the laser beam interruptions. Remove external dirt with a damp cloth. Do not use any aggressive cleaning agents (see chapter Cleaning)! If you detect dirt underneath the glass covers or scratches, please contact the customer service.

#### Laser is weak:

 Check the battery status and recharge the battery if necessary.

# Disposal

The icon with the crossed-out waste bin on waste electrical or electronic equipment stipulates that this equipment must not be disposed of with the household waste at the end of its life. You will find collection points for free return of waste electrical and electronic equipment in your vicinity. The addresses can be obtained from your municipality or local administration. For further return options provided by us please refer to our website www.trotec24.com.

The separate collection of waste electrical and electronic equipment aims to enable the re-use, recycling and other forms of recovery of waste equipment as well as to prevent negative effects for the environment and human health caused by the disposal of hazardous substances potentially contained in the equipment.



In the European Union, batteries and accumulators must not be treated as domestic waste, but must be disposed of professionally in accordance with Directive 2006/66/EC of the European Parliament and of the Council of 6 September 2006 on batteries and accumulators. Please dispose of batteries and accumulators according to the relevant legal requirements.

# Trotec GmbH & Co. KG

Grebbener Str. 7 D-52525 Heinsberg J+49 2452 962-400 ±+49 2452 962-200

info@trotec.com www.trotec.com